

Product:

SP400

Service description Ver: no: 3125-S005 1

Symptom

The pump vibrates.

Caused by

- 1. Runs the pump at critical speed.
- 2. Excessive deviation of the angle of the drive joint. Max 20°.
- 3. Bent drive shaft.
- 4. Worn out plastic bearing.
- 5. The bearing between the drive shaft and the double joint is worn out.
- 6. Accumulation of "dry manure" between drive shaft and cover tube.

Solution

- 1. Certain speed can cause vibrations. Avoid this by a low increase/decrease in the speed.
- 2. Raise or lower the pump relative to a tractor.
- 3. Replace the drive shaft and possibly the cover tube. Check the double-joint. <u>3125-S007</u>
- 4. Check the bearing of the impeller. Replace the plastic bearing if the bearing is worn. 3125-S006
- 5. Change bearings. <u>3125-S008</u>
- 6. Clean the inside of the cover tube. <u>3125-S009</u>