

# Service description

Product: VM420	Service description No: 4120-S002	Ver: 2
-------------------	---	-----------

## Symptom

Feeding belt does not start.  
Feeding belt runs too fast.

## Caused by

1. The bypass hose or hoses for the log rack are not connected.
2. The joystick handle is deflecting too much.
3. Breakage in the cottered joint between hydraulic motor and drive wheel for feeding belt..
4. The safety valve for cover above the splitting ram is incorrectly adjusted or do not operate properly.

## Solution

1. Stop tractor / engine and connect bypass hose or connect the log rack.
2. By loosening the screw marked D (illustration No.1) a mechanical stop can be repositioned in order to reduce the deflection of the joystick handle and consequently reduce feeding belt speed.
3. Examine the cottered joint and replace defective parts.
4. Watch description [4120-S015](#), to ensure that the safety valve has not slid from original position or do not function properly.

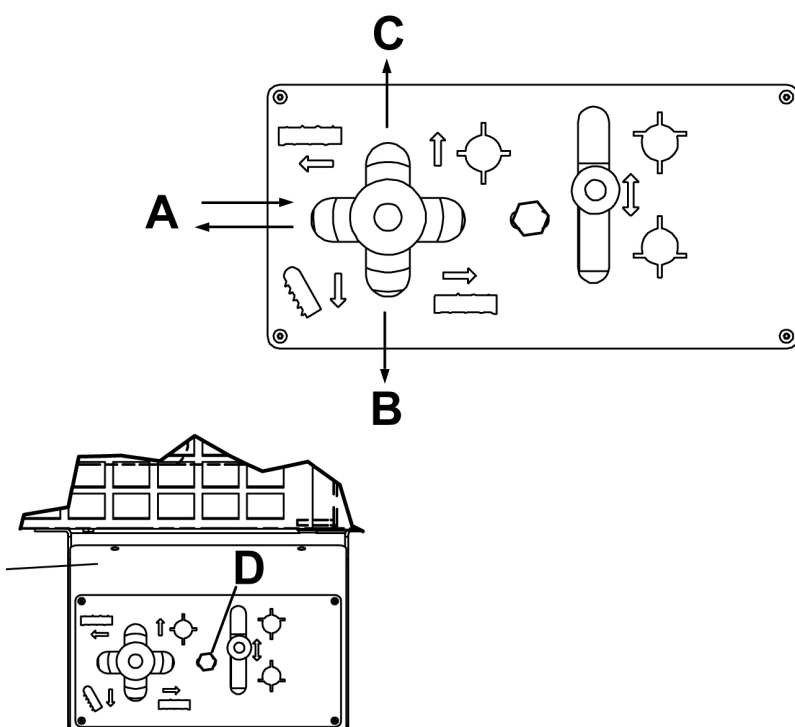


Illustration No.1